

# SMOKE ALARMS

## SMOKE ALARM CONTROLLER



## SMOKE ALARM CONTROLLER

The Emerald Smoke Alarm Controller provides an effortless method of testing, silencing and locating triggered smoke alarms without the need to reach up to the alarms on the ceiling.

The Smoke Alarm Controller will:

- Tests interconnected RF Smoke Alarms
- Locates and silences RF Smoke Alarms in the event of a false alarm.
- Provide a low battery warning
- No need for wiring. Lithium battery powered.

The Emerald Smoke Alarm Controller works with RF modules from the ranger & Vulcan Emerald Alarms series. The controller does not work with other smoke alarm brands.

## FEATURES

- Lithium battery powered
- RF interconnectable with up to 40 alarms on one wireless network
- Meets Australian smoke alarm standards (AS3786:214)
- 3 year product warranty



## SPECIFICATIONS

MODEL NUMBER	EP-SA-CONT-RF
NORMAL OPERATING & STORAGE TEMPERATURE	0° to 40°
DIMENSIONS	60mm x 15mm
WEIGHT	TBA
WARRANTY	3 Years

TEST	Press the " test button " with red LED flashes once, all interlinked smoke alarms will beep for 15 seconds.
LOCATE	Press the " locate button " with red LED flashes once, silence all smoke alarms except the one sensing smoke/fire.
SILENCE	Press the " silence button " with red LED flashes once, all smoke alarms will be silenced.
ALARM	Red Fire indicator. When the smoke alarm alarming, the red LED will flash once a second.
LOW BATTERY	When the remote controller is in low battery mode, the yellow LED will flash once every 8 seconds.

